


°C-Lite /°C-Lite Clima IAQ

Digital room thermostats for surface heating and cooling systems with built-in multi-sensor and digital communication via 1-Wire bus in conjunction with a current version of the °CALEONbox - see "Compatibility and connection °C-Lite with °CALEONbox" on page 2. Intuitive operation via integrated touch areas and LEDs. Air quality monitoring (Clima IAQ) possible via coloured status LED.

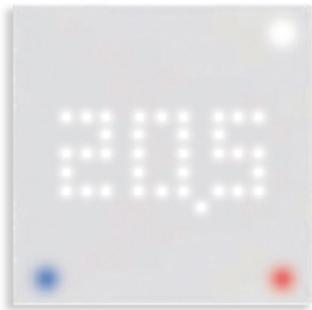


Technical Data

Power Supply	5V DC(+/- 10 %)	Protection Class	IP20
power consumption	0,6 W	Dimension	80 mm x 80 mm
Measurement Range		Housing	Plastic Pure white
Temperature:	0 °C ... 60 °C	Mounting	Surface / flush-mounted
- Accuracy / resolution:	+/- 1°C / 0,1 °C		
Humidity:	0% ... 100%		
- Accuracy / resolution:	(+/- 6 % / 0,1 %)		
CO2 equivalent*:	400 ppm - 2001 ppm		
Air quality IAQ*:	0 - 300		

* indicative value, only in Clima IAQ version

Wall mounting and electrical connection

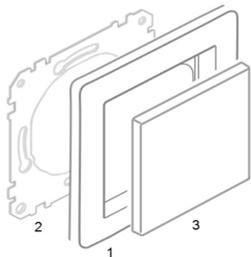

Mount the sensor in a suitable location.



Caution!

Device and function may be damaged. Select a suitable environmental condition. Direct sunlight, sources of heat and cold, e.g. radiators and windows must be avoided.

Mounting on plastic wall socket

Attach the mounting frame (2) to the switch box. Make the electrical connection as described below.

Electrical connection

Connect the sensor to 5V DC power supply. GND = Grey DQ= Orange, VCC= Red


Insert the Element

Hold the cover frame (1 - not included in the scope of delivery) against the mounting frame (2). Align the °C-Lite (3) with the mounting frame and press it in until it engages in the frame.




Type plate / 1-Wire ID

°C-Lite Room Sensor
5V DC | 0,6W
SOREL GmbH Mikroelektronik
CE, RoHS, IP20

 

Each sensor has a unique 1-Wire ID. This ID is required for sensor room assignment in the °CALEONbox. You will find the ID on the small sticker supplied.


Operation

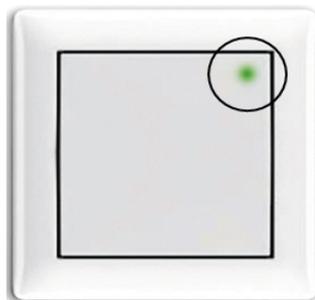

Standby Screen


IAQ ok (Clima IAQ)

Touching the touch areas activates "Display".

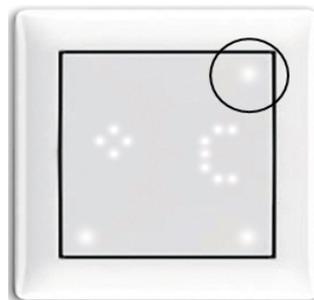

Measuring unit and measured value display

The first touch of the touch area shows the temperature. Repeated touching changes to other measured values and first shows the unit and after a short time the measured value.

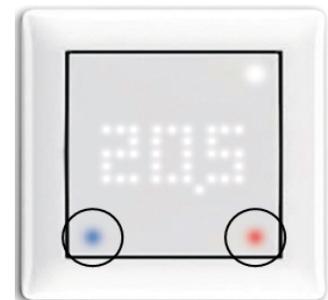


Setpoint adjustment

The set temperature can be reduced or increased by touching the blue and red touch areas.

°C-Lite room assignment


The °C-Lite sensor is assigned to a room via the menu 'Expert -> Settings -> Room'.

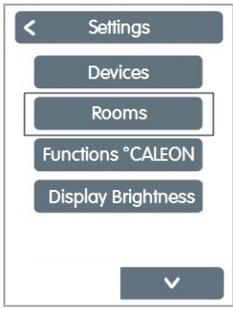


Expert > Settings > Rooms



Select or add room

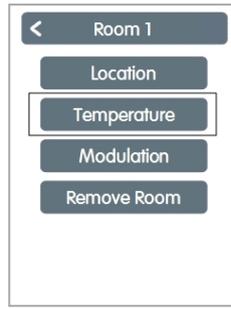


Select sensor type

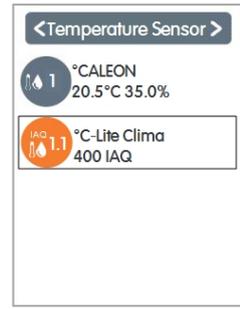

Assign sensor

LED

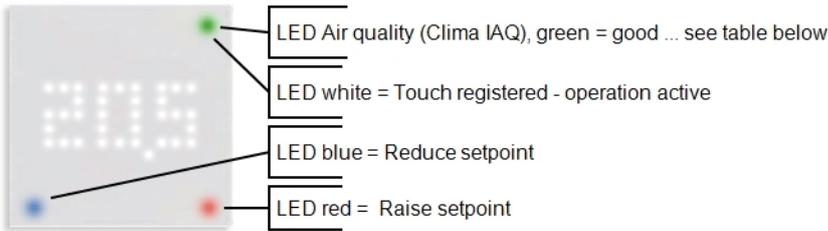


Measured values IAQ and CO2 equivalent

In the first few days after installation, the °C-Lite Clima IAQ goes through a calibration phase during which fluctuating measurements and major deviations may occur.

CO2	Air quality
400 - 600 ppm	Excellent
601 - 1000 ppm	Good
1001 - 1500 ppm	Satisfactory
1501 - 2000 ppm	Medium (ventilation recommended)
2001 ppm +	Bad (ventilation required)

IAQ	Air quality
0 - 50	Good
51 - 100	Moderate
101 - 150	Unhealthy for sensitive groups of people
151 - 200	Unhealthy
201 - 300	Very unhealthy
300 +	Hazardous to health

Set room setpoint

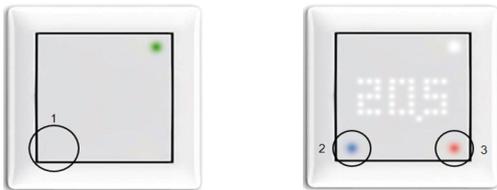

1. Activate the room setpoint menu (1) by touching the touch area (1).
Reduce (2) or raise (3) the room setpoint by touching the touch areas.

After 20 seconds, the display returns to the standby screen.

Compatibility and connection °C-Lite with °CALEONbox

The following must be observed when connecting °C-Lite with the °CALEONbox:

- **Art. No. untiln**
no °C-Lite via 5V DC, external power supply and software update required
- **Art. No. fromo**
1 °C-Lite via 5V DC, external power supply unit and software update required for others
- **Art. No. fromp**
up to 8 °C-Lite can be connected

